



User's Manual

FLAME QUAD



Item Code: 960443

Please read this manual carefully before assembly and use!

RIDING INSTRUCTIONS

- Insert the key and turn clockwise to the " on " position.
- **To move forward**, switch the left hand switch to " F " and press the right hand foot pedal.
- The speed can be restricted by setting the right hand switch to " low " .
- Maximum Speed: 6km/h
- **To reverse**, switch the left hand switch to " R " and press the right hand foot pedal.
- Reverse only has one preset speed.
- **To stop**, release the right hand foot pedal and press the left hand foot pedal.
- After use turn the key to the " off " position and remove the key.

IMPORTANT: Do not change direction (" F " to " R " or " R " to " F ") when the vehicle is in motion.

SAFETY WARNING


- Suitable for children aged between 3-7 years old.
- Maximum Weight: 30kg - Never overload.
- Only one child to use the vehicle at a time.
- Children must be under adult supervision at all time when using the vehicle.
- Do not operate the vehicle on wet, sandy, grass or uneven ground conditions.
- Protect the car from rain, splashes of water and moisture.
- The children's vehicle does not conformed to the highway code requirements and for this reason, can not be used on roads for public traffic, please make sure that your child drives the vehicle along suitable private roads, away from stairs or dangerous slopes.
- Please keep the packaging and instructions for future reference as they contain important information.

ASSEMBLY

ATTENTION: This toy must be assembled by an adult.

1. Carefully unpack and identify all parts –see parts list below.
N.B. Spanner is in the carton with the charger under the saddle.

- A - Steering Column
- B - Large Nut
- C - Backrest
- D - Screws (4)
- E - Keys (2)
- F - Mains Charger
- G - Steering Rod
- H - Spanner

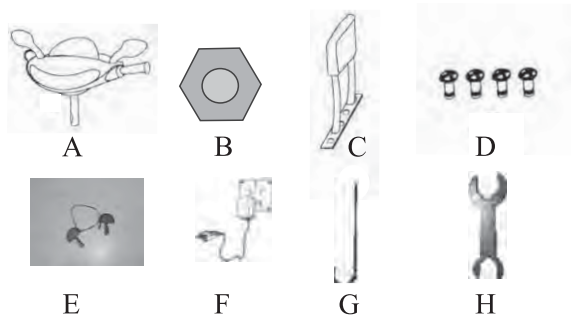

2. Unscrew the crosshead screw at the rear of the saddle and remove the saddle.
3. Remove the large nut (B) from the end of the steering column (A).
4. Thread the wire from the steering column through the slot behind the hole for the column, see Fig .1.

5. Continue to feed the wire through the slot as you fully lower the steering column into position.
6. Hold the steering column in place, the quad stands on its rear end, see Fig. 2.
7. Locate the steering column in the hole in the chassis cross rail and pull downwards to fully locate, see Fig. 3.
8. Fit the threaded end of the large nut over the lower end of the steering rod (G), see Fig. 4.
9. Feed the nut around the bend of the steering rod until it rests against the raised stop.



Fig.1



Fig.2



Fig.3



Fig.4

10. Feed the steering rod inside the steering column, ensuring that the hook end is engaged in the steering bar, See Fig. 5.
11. While pushing the steering rod upwards into the steering column, gently move the handlebars. When aligned the end of the steering rod will engage inside the steering column.
12. Secure the steering assembly by tightening the large nut with the spanner supplied (H).
13. Thread the wire from the steering column into the battery compartment, through the largest hole, which already has cables passing through it, see Fig. 6.
14. Place the quad on its four wheels.
15. Locate the backrest (C) into the two holes in the body behind the battery using the four self-tapping screws (D), see Fig 7.



Fig.5



Fig.6



Fig.7



Fig.8

CONNECTING THE ELECTRICS AND BATTERY FOR USE

16. Fit the motor connector plug to the battery connector, See Fig . 8 .
17. Replace the saddle and secure with the crosshead screw.

CHARGING THE BATTERY

ATTENTION: The charger is not a toy and must only be used by an adult.

Power input: AC 230V-240V

Power: 2x DC 6V 10AH Rechargeable Battery

Charging Time: 8-12 Hours.

DO NOT CHARGE FOR LONGER THAN 20 HOURS AT A TIME

Lifetime: 300 recharges approx.

1. Unscrew the crosshead screw at the rear of the saddle and remove the saddle.
2. Disconnect the motor connector plug from the battery connector.
3. Connect to the charger connector plug to the battery connector.
4. After charging reconnect the battery to the motor connector.
5. Replace the saddle and secure with the crosshead screw.

NOTES

1. Charge for 8-12 hours before first use.
2. The charger must only be used indoors.
3. The charger may get warm during charging.
4. Keep children away from the charger when charging the vehicle.
5. To lengthen the life of the battery, recharge after every use.
6. It is advisable to recharge the battery when the vehicle starts to slow down, this will also lengthen the life of the battery.
7. Over long periods if not in use, recharge at least every three months.
8. Store both charger and spare fuses carefully for future use.

MAINTENANCE

Regularly check the conditions of the vehicle, particularly the steering column, electrical installation and check that all wearable parts are sound.

CLEANING

The surface of the vehicle should be cleaned with a damp cloth; only an adult should do this.

TROUBLE SHOOTING

1. The vehicle does not go:

- (1). Check that the battery and motor connectors are correctly assembled.
- (2). Unscrew the battery securing clamp check the 25 amp fuse fitted to the caps on both batteries. Replace any failed fuse.
- (3). Carefully remove the cap from each battery and check that the battery terminals are correctly connected. (See below 'How to connect the batteries')

2. The vehicle goes very slowly:

- (1). Fully recharge the battery for 20 hours maximum.

3. The battery cannot be fully charged:

- (1). The fuse may be damaged: if damaged replace with a fuse
- (2). The charger or battery may be damaged

HOW TO CONNECT THE BATTERIES


1. If the batteries are disconnected connect the red wire to the positive terminal and the black wire to the negative terminal of either of the batteries.
2. Connect the white wire to the positive terminal and the brown wire to the negative terminal of the second battery.

EXCHANGE AND REFUND POLICY

1. This product has a warranty period of 6 months from the date of purchase.
2. If any defects become apparent during this time period caused by defective materials or workmanship, the retailer shall decide whether to repair or replace the product or refund the purchase price.
3. Proof of purchase must be presented when making a warranty claim, so keep your receipt safe.
4. This warranty does not extend to damage caused by:
 - (1). Incorrect assembly
 - (2). Unauthorised work on the product
 - (3). Normal wear and tear
 - (4). Inappropriate use of the product
5. Please contact the store where the item was purchased if you wish to make a warranty claim. This does not affect your statutory rights.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

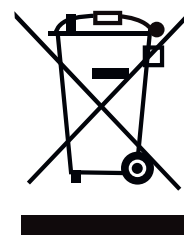

Please Recycle Your Spent Batteries

Batteries should not be disposed of in unsorted municipal waste, but separately collected to facilitate the correct treatment and recycling of the substances they contain. The recycling of batteries ensures the recovery of these valuable materials and prevents any potentially harmful effects upon both the environment and human health. Please contribute to battery recycling by segregating all spent batteries and actively participating in their collection and recycling. Various battery collection schemes will be in operation in different areas of the country. However, battery collection bins will be available at retail stores that sell batteries as well as at schools, libraries and other public buildings.