

FUJI 5

Helpful hint: Practice pitching your tent before you go away. This ensures that you are familiar with the tent; this practice is especially valuable if you have to pitch in adverse weather conditions

Unpacking your tent

- Check the ground where you intend to pitch the tent is free from rocks and sharp objects
- Before assembly please check you have the following:

- 1x outer tent
- 1x Inner tent bedroom compartment
- 3x 11mm Black fibre glass poles(A)
- 4x 16mm steel pole connected(C)
- 2x 16mm steel pole connected(B)
- 2x 16mm steel pole
- 46 Steel pegs
- 1x attachable rising groundsheet
- 1x Divider

Step 1

- After checking the tent bag contents remove the outer tent from the carry bag and lay out the outer tent on the ground. Ensure all doors are zipped closed. Next feed the three black glass fibre poles (A) carefully through the roof pole sleeves ensuring the pole does not snag in the sleeve. Fit the ends of these poles into the smaller diameter holes in the six plastic joints (D).
- Fit the two shorter steel poles (B) into the larger diameter holes in the plastic joints (D) at the rear of the tent. Fit the four longer steel poles (C) into the larger diameter holes in the plastic joints (D) at the mid point and front of the tent.


Step 2

- With one person at each side, attach the pins into the ends of the poles (diagram 2.1). You are now ready to attach the opposing metal pins to each of the poles, as you apply pressure to the pole the tent will form the intended shape. Make sure that the pole is not snagged or restricted as damage to the pole and / or the sleeve could occur if care is not taken during this part of assembly. Attach the plastic clips along the exposed lengths of the poles.
- Using the wire pegs, peg out the rings at the base of each pole, the tensioning straps at the four corners of the outer tent (diagram 2.2) and all other elastic loops around the base of the outer tent. Always drive pegs at an angle of 45° to the ground (diagram 4.1).
- Use the tensioning straps at the base of the poles and around the edges of the outer tent to tension tent.


Step 3

- Remove the inner tent from the carry bag and take it inside the tent. Position it to the rear of the tent ensuring that the inner tent door zips are closed and are facing outward.
- Attach the elastic hooks at the rear of the inner tent / bedroom groundsheet to the rings in the tensioning straps at the corners of the outer tent and the other elastic hooks to the rings at the base of the front cross pole. Peg down the bedroom groundsheet at the two points on the rear side and the central point at the front.
- Attach all of the elasticated toggles of the inner tent to the plastic rings sewn into the outer tent (diagram 3.1). The inner tent divider may be fitted centrally to give two equal sized bedrooms, or offset to give one larger bedroom
- Remove the groundsheet from the bag and place in the correct position. Attach the elastic hooks to the rings at the base of the poles and in the two front tensioning straps.
- Attach all of the elasticated toggles of the rising groundsheet to the plastic rings sewn around the outer tent (diagram 3.1). Secure the groundsheet to the front of the inner tent and at the bottom of the doors using the hook and loop tape.
- When using the doors the elasticated toggles of the rising groundsheet next to the door should be undone. The edge of the groundsheet should be folded down and pegged, using the groundsheet pegs, to prevent trip hazards.


1

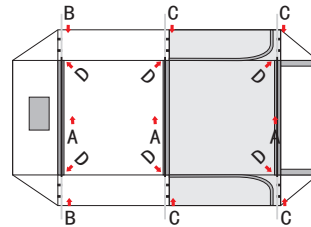

2

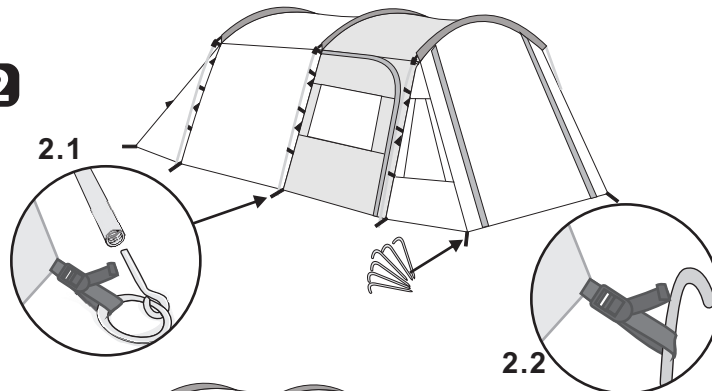

3

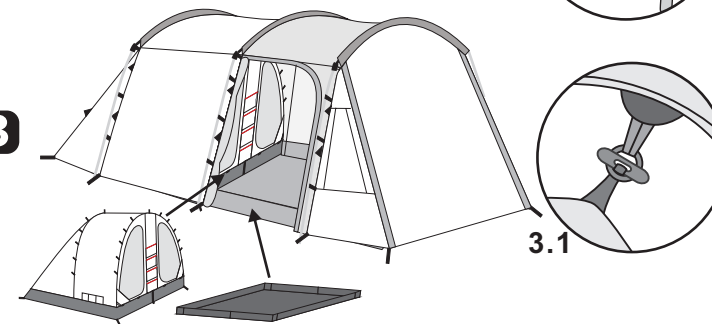

4



Step 4

- Unravel all guyropes and begin pegging in place (do not tension at this stage) Always drive pegs at an angle of 45° to the ground (diagram 4.1).
- With the second person at opposing corners of the tent begin tensioning the guyropes to give the tent full stability and correct form ,The guy ropes will require retensioning periodically during the time the tent is pitched
- Evenly tensioned guyropes will reduce the risk of damage to poles and sleeves during adverse weather.



When taking your tent down, always push the poles through the sleeves - never pull them. It is recommended that at least two people take down this tent.

Taking Down Your Tent

- Remove the groundsheet and inner bedroom from the outer tent. Fold these neatly ready for repacking into the carry bag.
- Slacken all the guy ropes and remove all pegs.
- Carefully remove the pins from the poles. Be careful as the poles will be under considerable pressure, firmly grasp the pole when removing.
- Push the pole through the sleeves (best with two people) and make sure the pole does not snag on the sleeve. Remember to never pull the poles as the elastic may break.
- Fold the outer tent to a size of the width of the carry bag. Place the pegs and poles into their tie bags. Tightly roll the outer tent, inner bedroom, groundsheet, poles, pegs together and place in the carry bag.
- If the tent is wet or damp please remember that the tent will need to be unpacked and allowed to dry fully. Failure to do so may result in damage to the tent.

Replacement poles are available for the tent - ask a member of the Halfords store team for details