

Helpful hint: Practice pitching your tent before you go away. This ensures that you are familiar with the tent; this practice is especially valuable if you have to pitch in adverse weather conditions

Unpacking your tent

- Check the ground where you intend to pitch the tent is free from rocks and sharp objects
- Before assembly please check you have the following:
 - 1x outer tent
 - 2x inner tent bedroom compartment
 - 1x 12.7/11mm Black fibre glass poles(A)
 - 2x 12.7/11mm Grey fibre glass poles(B)
 - 2x16mm Steel pole
 - 45x Steel pegs
 - 1x large ground sheet
 - 1x small ground sheet

Step 1



- After checking the tent bag contents remove the outer tent from the carry bag and lay out the outer tent on the ground. Ensure all doors are zipped closed. Next feed the colour coded poles carefully through the colour coded pole sleeves ensuring the pole does not snag in the sleeve.

Step 2

- With one person at each side, attach the pins into the ends of the poles(diagram 2.1). You are now ready to attach the opposing metal pins to each of the poles, as you apply pressure to the pole the tent will form the shape of the intended arc. Make sure that the pole sleeve is located on the thinner central section of the pole and that the pole is not snagged or restricted as damage to the pole and / or the sleeve could occur if care is not taken during this part of assembly. Attach the plastic clips along the exposed lengths of the poles.
- Using the wire pegs, peg out the rings at the base of each pole, the four corners of the outer tent (diagram 2.2) and all other elastic loops around the base of the outer tent. Always drive pegs at an angle of 45° to the ground(diagram 4.1).

Step 3

- Remove an inner tent from the carry bag and take it inside the tent. Position it at the end of the tent next to the two outer tent doors (not next to the windows), ensuring that the inner tent door zips are closed and are facing outward.
- Attach the elastic hooks at the rear of the inner tent / bedroom groundsheet to the rings in the corners of the outer tent and the other elastic hooks to the rings at the base of the poles.
- Attach all of the elasticated toggles of the inner tent to the plastic rings sewn into the outer tent(diagram 3.1).
- If you wish to fit both inner tents / bedrooms, repeat the steps above for the second inner tent. If you do not require the second inner tent / bedroom, an additional extended groundsheet is provided and this may be fitted later.
- Remove the groundsheet from the bag and place in the correct position, with the four eyelets on the door flaps of the rising groundsheet positioned beneath the two doors. Attach the elastic hooks to the rings at the base of the poles.
- Attach all of the elasticated toggles of the rising groundsheet to the plastic rings sewn around the outer tent. Secure the groundsheet to the front of the inner tents and at the bottom of both doors using the hook and loop tape.
- If you have not fitted the second inner tent / bedroom, position the additional groundsheet at the end of the tent that is next to both windows. Attach the elastic hooks to the rings at the base of the poles and attach the elasticated toggles of the rising groundsheet to the plastic rings sewn around the outer tent. Undo the elasticated toggles at the side of the central groundsheet to allow it to fold down on top of the additional groundsheet, secure it in position using the hook and loop tape.
- When using the doors the elasticated toggles of the rising groundsheet next to the door should be undone. The edge of the groundsheet should be folded down and pegged, using the groundsheet pegs, to prevent trip hazards.

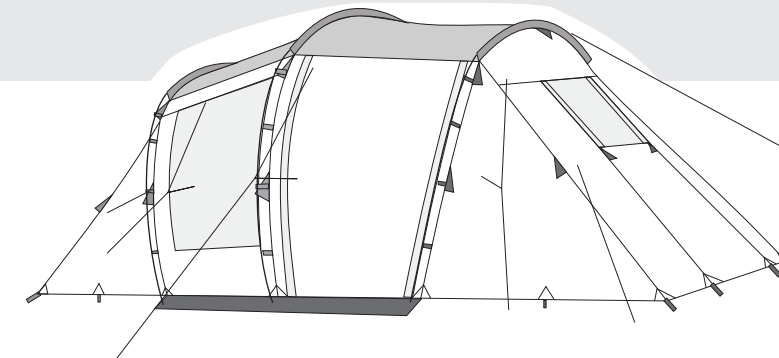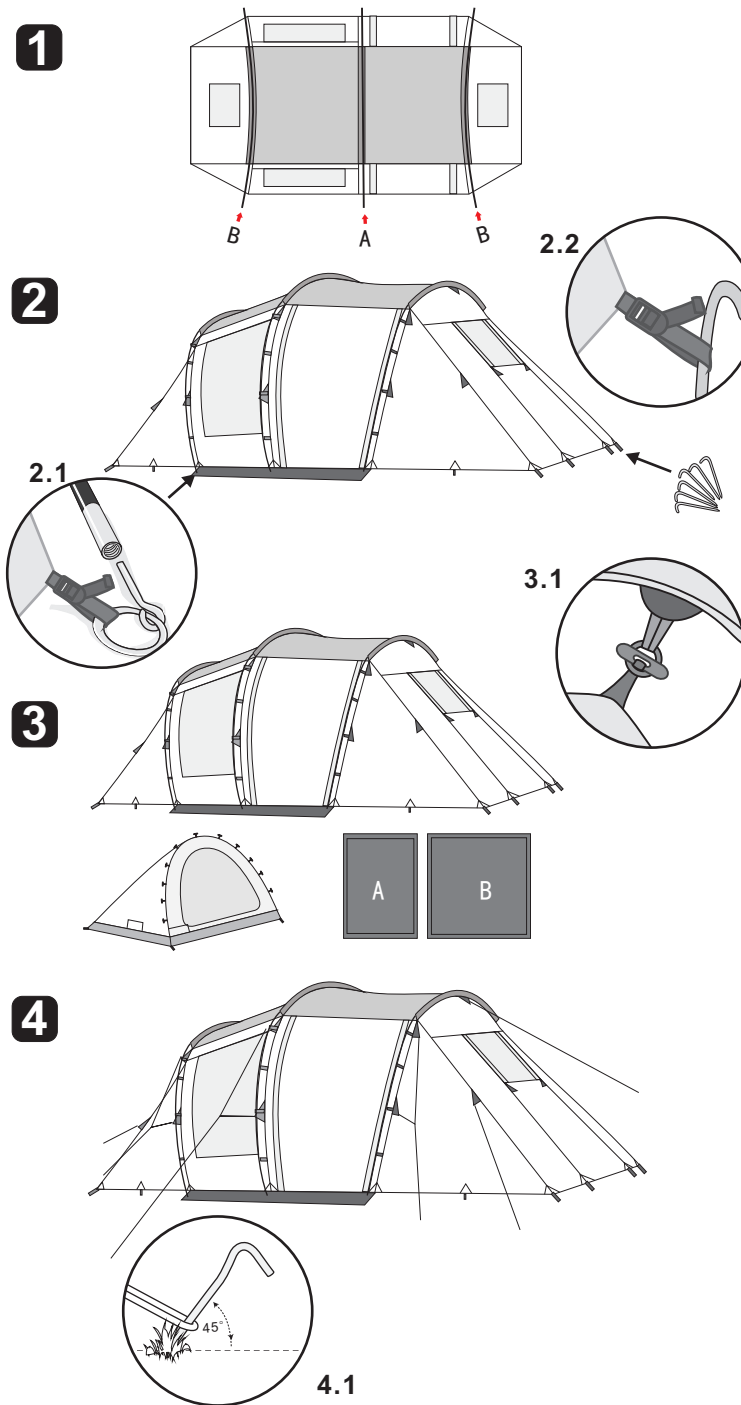

Step 4

- Unravel all guyropes and begin pegging in place (do not tension at this stage) Always drive pegs at an angle of 45° to the ground(diagram 4.1).
- With the second person at opposing corners of the tent begin tensioning the guyropes to give the tent full stability and correct form. The guy ropes will require retensioning periodically during the time the tent is pitched
- Evenly tensioned guyropes will reduce the risk of damage to poles and sleeves during adverse weather.



When taking your tent down, always push the poles through the sleeves - never pull them. It is recommended that at least two people take down this tent.

Taking Down Your Tent

- Remove the groundsheet and inner bedroom from the outer tent. Fold these neatly ready for repacking into the carry bag.
- Slacken all the guy ropes and remove all pegs.
- Carefully remove the pins from the poles. Be careful as the poles will be under considerable pressure, firmly grasp the pole when removing.
- Push the pole through the sleeves (best with two people) and make sure the pole does not snag on the sleeve. Remember to never pull the poles as the elastic may break.
- Fold the outer tent to a size to fit the width of the carry bag. Place the pegs and poles into their tie bags. Tightly roll the outer tent, inner bedroom, groundsheet, poles, pegs together and place in the carry bag.
- If the tent is wet or damp please remember that the tent will need to be unpacked and allowed to dry fully. Failure to do so may result in damage to the tent.

Replacement poles are available for the tent - ask a member of the Halfords store team for details