



2 PERSON DOME TENT with porch

Helpful hint: Practice pitching your tent before you go away. This ensures that you are familiar with the tent and is especially valuable if you have to pitch in adverse weather conditions.

Unpacking your tent

- Check the ground where you intend to pitch the tent is free from rocks and sharp objects
- Before assembly please check you have the following:
 - 1 x 2 man tent (outer skin)
 - 1 folding carry bag
 - 2 x 8.5mm black fibre glass poles , 3.44 meter length (A)
 - 1 x 7.9mm grey fibre glass poles , 2.74meter length (B)
 - 18 Steel pegs (for outer skin and guy ropes)
 - 1 x Ground sheet
 - Guylines pre-attached

Step 1


- After checking the tent bag contents remove the outer tent from the carrybag and lay out the outer tent, on the ground. Ensure all doors are zipped closed. Next feed the colour coded poles carefully through the colour coded poles sleeves ensuring the pole doesn't snag in sleeve.
- Make sure that the pole is not snagged or restricted as damage to the pole and/or the sleeve could occur if care is not taken during this part of assembly. Tension the porch pole

Step 2

- With two people at opposite corners of the main dome, attach the pins into the ends of the poles (diagram 2.1). You are now ready to attach the opposing metal pins to each of the poles, as you apply pressure to the pole the tent will form the shape of the intended arc.
- Using the wire pegs, peg out the rings at the base of each pole, the two front corners of the flysheet and all other elastic loops around the base of the outer tent (diagram 2.2)
- Always drive pegs at an angle of 45 ° to the ground (diagram 2.2) . Ensure that the cowl is hooked into place over the roof vent to prevent water ingress in wet conditions

Step 3

- Remove the inner tent from the carry bag and take it inside the tent. Position it at the rear of tent ensuring that the door zips are closed and facing outward
- Peg out the bedroom groundsheet in the centre of the main dome of the tent. Attach all of the elasticated toggles of the inner tent to the plastic rings sewn into the flysheet.
- Remove the groundsheet (diagram 3.1) from the bag and place in position. Peg out the groundsheet and tuck the extended flap under the front of inner tent/bedroom
- Make sure the pegs are level with the ground surface to prevent trip hazards

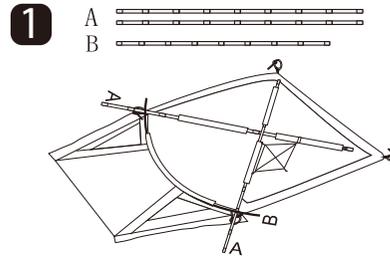

Step 4

- Unravel all guyropes and begin pegging in place (do not tension at this stage) Always drive pegs at an angle of 45 ° to ground (diagram 4.1) . With the second person at opposing corners of the tent begin tensioning the guyropes to give the tent full stability and correct form. The guyropes will require retensioning periodically during the time the tent is pitched.
- Evenly tensioned guyropes will reduce the risk of damage to poles and sleeves during adverse weather.



When taking your tent down, always push the poles through the sleeves - never pull them. It is recommended that at least two people take down this tent.

Taking Down Your Tent

- Slacken all the guy ropes and remove all pegs.
- Carefully remove the poles from the plastic holes. Please be careful as the poles will be under considerable pressure, firmly grasp the pole when removing .
- Carefully push the pole through the sleeves (best with two people) and make sure the pole ferule does not snag on the sleeve .
- Remember to never simply pull the poles as the elastic may break.
- Fold the outer tent to the desired size to fit the bag. Place the pegs and poles back into their the bag and put into the carry bag.
- If the tent is wet or damp please remember that the tent will need to be unpacked and allowed to dry fully. Failure to do this may result in damage to the tent.

Replacement poles are available for this tent - ask a member of the Halfords store team for details